



BOTTOM VIEW WITH CEILING SHOWN

NEW LIGHT LOCATION

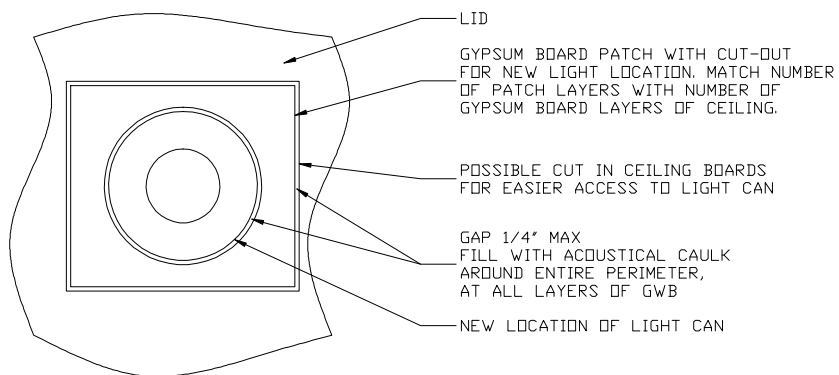

PRIOR LIGHT LOCATION

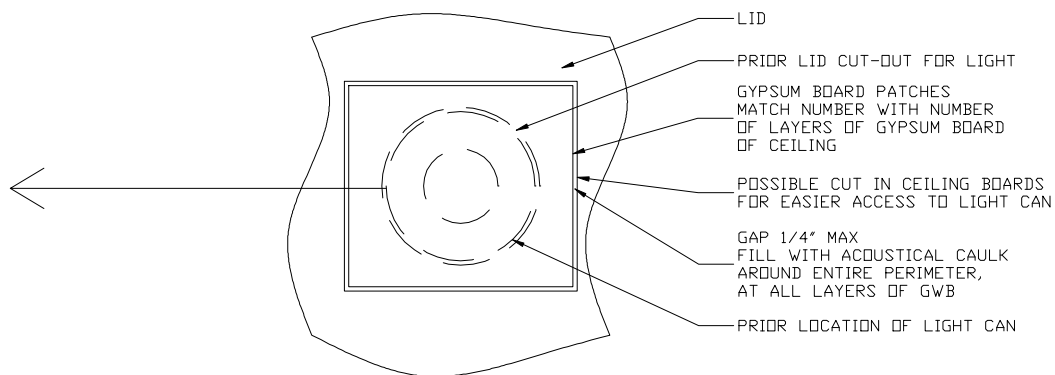

ALSO APPLY RECESSED LIGHT BOX-OUT DETAIL AT NEW LOCATION. SEE DETAILS VD-1A AND VD-1B AS NEEDED - SECTION AND BOTTOM VIEWS.

NOTES: CONTACT WITH RESILIENT CHANNELS OF CEILING MUST BE AVOIDED. USE STUD FINDERS TO LOCATE RESILIENT CHANNELS AND FRAMING AND ALLOCATE NEW LIGHT LOCATION BETWEEN RESILIENT CHANNELS.



**RELOCATION OF RECESSED CEILING LIGHT ACOUSTICAL CONSIDERATIONS**



**LISTEN ACOUSTICS, INC.**  
 5144 W. Sunset Drive  
 Lake Oswego, OR 97035  
 (503) 241-5255

1100 Dexter Ave. N.  
 Suite 100  
 Seattle, WA 98109  
 (206) 223-1390

DRAWING SCALE:  
**NTS**

DRAWN BY:  
**AM**

CHECKED BY:  
**NTC**

DATE:  
**03/10/09**

FILE:  
**VAUX DETAILS.DWG**